

Automatic Rod Lubricator

PRODUCT OVERVIEW

- Above grade
- Low cost
- Use with all Blackhawk pumps
- Self-contained 4.5v alkaline battery power
- Quick installation; screw-in cartridge
- Cartridge easy to remove and replace
- You control program – to 12 months
- Use with oil or grease
- Reduces lubricant consumption
- Simple, functional design
- Operates from 5° to 120° F (-15° to 50° C)
- Pressure to 140 psi (10 bar)
- Safe for workers
- Minimal environmental impact
- Two-year limited warranty
- Ships as part of complete pump package, or as accessory to existing pumps
- Continuous lubrication means less wear on pump and parts, potentially longer life



Mini-drip, battery-powered oiler uses replaceable 1-yr. cartridge

CONTINUOUS LUBRICATION
 High Reliability; Low Cost

*Use with all Blackhawk pumps
 -- Pneumatic, Electric and Solar*

Blackhawk's low-cost, highly efficient auto-lubricator is designed to deliver small quantities of oil over long periods of time at user-set rates of up to one year.

The screw-in cartridge, made from recycled polymer, can be replaced in 60 seconds. Safe for workers, with minimal environment impact, the auto-lube operates to 140 psi (10 bar).

Auto lubricator mounted on Apollo Solar Pump

Installation and Operating Instructions

Note: The Automatic Rod Lubricator was primed before shipping and is ready to use

To Install

1. Install 4.5v DC alkaline battery pack
2. Pre-charge all fittings, lube lines and bearings with same lubricant ordered with unit
3. Using metal adaptor, install appropriate lubricator LPS fitting (1, 3, 6 or 12-month) onto pump's lube point
4. Screw the lubricator cartridge onto fitting
5. The unit will cycle once and proceed to follow program setting.
6. Visually inspect periodically.

To Replace

1. When empty, unscrew the lubricator from the fitting.
2. Place the unit on a firm surface with outlet-end down
3. Push down on clear plastic housing, while turning the black-plastic locking ring counter-clockwise
4. The housing and spring assembly will separate from the pump base.
5. Remove the empty cartridge and battery pack. Replace with new.

